

IJ-S, IJ-G, IJ-Q



Heating jackets

In our jacket heaters there are three components: a heater, the insulation for that heater, and the carrier for that assembly. The outer carriers on these versions may be washable. Different shapes are manufactured to customer requirements and many attachment and fixing methods are available. A small number of jacket versions are available with hazardous area approval.



Area Specifications			
Area classification	Nonhazardous, ordinary area	Nonhazardous, ordinary area	Nonhazardous, ordinary area
Ingress protection	IP65	IP20	IP20
Electrical protection class	Class II; Class I with metal sheath	See note	See note
Maximum withstand temperature (power off)	200°C	450°C	900°C
· · · · · · · · · · · · · · · · · · ·			

Note: These are components for further installation. The protective arrangements of Protection Class I or Class II must be followed during installation of the components and are the responsibility of the assembly company. Please refer to the manual for further information.

Heater Construction			
Туре	Resistance heating cable	Resistance heating cable	Resistance heating cable
Material	Various alloys	Various alloys	Various alloys
Material of insulation	Depending on design	Depending on design	Quartz-glass
Material of outer sheath	Silicone	Glass-silk with PTFE, Silicone or Aluminium coating	Quartz-glass
Thickness of thermal insulation	6 to 12 mm	10 to 100 mm	10 to 100 mm
Temperature Control			
Sensor type	PT100, Fe-CuNi/J or NiCr- Ni/K acc. to DIN	PT100, Fe-CuNi/J or NiCr- Ni/K acc. to DIN	NiCr-Ni Type K
Technical Data			
Frequency	50-60 Hz	50-60 Hz	50-60 Hz
Maximum operating voltage	400 Vac	240 Vac	240 Vac
Maximum area load	0.7 W/cm ²	1.5 W/cm ²	3.6 W/cm ²

د.

www.thermocoax.com



THERMOCOAX from vision to reality







France :

 THERMOCOAX SAS

 40 Bd Henri Sellier

 F 92156 SURESNES Cedex

 Tél. : +33 1 41 38 80 50

 Fax : +33 1 41 38 80 70

 info@thermocoax.com

Germany :

THERMOCOAX ISOPAD GmbH

Englerstrasse 11 D-69 126 HEIDELBERG Tél. : +49 6221 3043-0 Fax : +49 6221 3043-956 isopad.info@thermocoax.com

USA :

THERMOCOAX Inc. 6825 Shiloh Road East, Ste B-3 ALPHARETTA, GA 30005 Tél. : +1 800 298 3345 Fax : +1 678 947 4450 info@thermocoax.us

UK :

THERMOCOAX UK Ltd. Office N° 5

Manor Farm Aubourn, Lincolnshire LN5 9DX Tél. : +44 (1522) 789 900 Fax : +44 (1522) 789 902 info-uk@thermocoax.com

CHINA :

法国热缆公司 四川省成都市蛟龙工业港双流园 区涪江路11座 电话:13701325459 info-china@thermocoax.com

Important: All information, including illustrations, is believed to be reliable. Users, however, should independently evaluate the suitability of each product for their particular application. THERMOCOAX makes no warranties as to the accuracy or completeness of the information, and disclaims any liability regarding its use. THERMOCOAX only obligations are those in the THERMOCOAX Standard Terms and Conditions of Sale for this product, and in no case will THERMOCOAX or its distributors be liable for any incidental, indirect, or consequential damages arising from the sale, resale, use, or misuse of the product. Specifications are subject to change without notice. In addition, THERMOCOAX reserves the right to make changes—without notification to Buyer—to processing or materials that do not affect compliance with any applicable specification.